


Instructions - XT-402, XT-404, XT-406 Floodbank Frame



Attach XT
Handlamps
to holder in
frame as
illustrated.



Release XT
Handlamps
from holder
in frame as
illustrated.

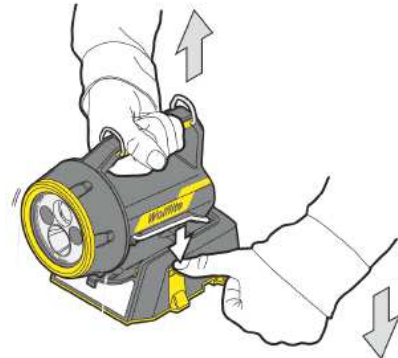

Adjust Beam direction
by loosening and
tightening the wing
bolt.



Tighten
to lock in
position



WARNING: Plastic Holders are Potential Static Hazard.
Clean only with a Damp Cloth.
No Detergents or Chemicals

Disposal of packaging and associated parts should be carried out in accordance with national regulations.

USE ONLY GENUINE WOLF REPLACEMENT PARTS

The Wolf Safety Lamp Co. Ltd has a policy of continuous product improvement. Changes in design details may be made without prior notice.

*Wolf Safety Lamp Company
Saxon Road Works, Sheffield, S8 0YA
Tel: +44 114 255 1051 Fax: +44 114 255 7988
E-mail: info@wolf-safety.co.uk Website: www.wolf-safety.co.uk*

